

# SERVICE ENTRANCE MAST

THE METHOD SHOWN SHOULD GENERALLY BE SATISFACTORY. THE MEMBER MUST CONSULT THE ARCHITECT, CONTRACTOR, OR ELECTRICIAN CONCERNING ELECTRICAL LOAD AND THE ABILITY OF THE HOUSE TO SUPPORT TENSION OF SERVICE WIRE (MAX. 500 LBS. PER SERVICE) PROVIDE ELECTRICAL LOAD INFORMATION TO MVEC FOR PROPER ELECTRICAL SERVICE AND CONTACT MVEC ON LOCATION OF METER

COOPERATIVE WILL:  
FURNISH AND INSTALL  
METER AND SERVICE  
DROP.

MEMBER WILL:  
FURNISH & INSTALL METER  
BASE AND FURNISH AND  
INSTALL WEATHER HEAD, RISER,  
PIPE CLAMPS, AND OTHER  
REQUIRED MATERIALS. ALL  
BASES & DEVICES SHALL  
BE BONDED TO GROUND.

